

Warranty

This appliance is guaranteed to be free from defects in parts and manufacture for 12 months from date of purchase, provided that the unit is used under the normal operating conditions shown within the manual. Your attention is drawn to the following:

- We will not accept any liability for damage or injury caused by improper use.
- We will not be liable for any damage caused by moving the appliance; improper power supply; defective wiring or fuses; accident, alteration, abuse or misuse of the appliance; abnormal operating conditions; commercial or industrial use; fire; water damage; or customer misuse.
- This warranty is void if service on the unit is performed by any person other than an approved technician, or if the appliance is used for commercial purposes.

This warranty is available only to the original purchaser and is not transferable. Your normal consumer rights are not affected.

If service is required, **DO NOT ATTEMPT TO REPAIR UNIT YOURSELF**. Please return unit to store. Proof of purchase will be required for any warranty claims. You must retain your original receipt. If service under warranty is required, you will be required to produce this. Please also retain the original packaging should the unit need to be returned.

Please note: As part of our policy of continuous product improvement, We reserves the right to amend specifications without notice.

iceQ

Refrigerator

Owner Manual

To ensure safe operation, please read this instruction manual thoroughly before use.

Refrigerator

Thank you for buying this Refrigerator. It has been designed and manufactured for many years of trouble-free service. Operation is very simple, but please take a few minutes to read this booklet. It contains important safety information, and tips to ensure you receive the best possible service from your Refrigerator.



WARNING:

RISK OF ELECTRICAL SHOCK HAZARD

USERS IN NORTH AMERICA This unit must be plugged into a grounded 120V AC circuit.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF. Ensure that the appliance is properly grounded. Stop using the appliance immediately if electric shock is felt when touching the chiller.

USERS IN EUROPE This unit must be earthed.

If the power cable is damaged, it must be replaced by a qualified engineer to avoid shock hazard. DO NOT ATTEMPT TO SERVICE THE ITEM YOURSELF. Ensure that the appliance is properly earthed. Stop using the appliance immediately if electric shock is felt when touching the chiller.

DISPOSAL OF OLD REFRIGERATORS

BE SURE TO MAKE ANY LOCKS UNUSABLE. IF POSSIBLE, REMOVE THE DOOR(S) AND DISCARD SEPARATELY.

WARNING – CHEMICAL HAZARD: DO NOT ALLOW CHILDREN TO PLAY WITH THE OLD APPLIANCE. CONTACT YOUR LOCAL AUTHORITY FOR PROPER DISPOSAL PROCEDURES.

Before disposing of an old appliance, please make sure it is switched off and safe. Unplug the appliance and break any locks in order to avoid children becoming trapped.

Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal. The valuable materials contained in a refrigerator can be recycled.

Contact your local waste disposal depot for proper disposal of an old appliance and contact your local authority or dealer if you have any questions. Please ensure the pipework of your refrigerator is not damaged prior to disposal. You can contribute to environmental awareness by insisting on an appropriate non-polluting method of disposal.

DISPOSAL OF PACKAGING

All the packaging materials with your Refrigerator may be disposed of without danger to the environment. The cardboard may be broken or cut into smaller pieces and given to a waste

Power Failure

- If a power cut occurs, do not open the door more often than necessary in order to conserve cold air.

TROUBLESHOOTING


Before returning your Refrigerator to the store, check the following points; you may be able to solve any problem yourself.

Problem	Solution
Your refrigerator does not operate	<ul style="list-style-type: none"> • Check power cable is plugged in and switched on. • The circuit breaker has tripped or the fuse has blown. • The temperature control is set at "0".
Your refrigerator is too cold	<ul style="list-style-type: none"> • The temperature control dial may be set too high.
Your refrigerator is not cold enough	<ul style="list-style-type: none"> • Check the temperature control dial is set at "3". • A higher external ambient temperature may require a higher setting. • The door is opened too often. • The door is not closed completely. • The door gasket does not seal properly. • The Cooler does not have the correct clearances at the sides/back.
The defrosting water overflows inside the cooler and onto the floor	<ul style="list-style-type: none"> • Check if the coolers drain pan is full.
The side panel heats up	<ul style="list-style-type: none"> • This is a result of the dissipation of the heat from inside the cabinet.
Condensation forms on the outside of the cooler	<ul style="list-style-type: none"> • Condensation will form on the outside of the cooler if it operates in moist areas, simply wipe it dry.
The cooler seems to make too much noise	<ul style="list-style-type: none"> • Appliance is not on a level, firm surface or may be touching other items. • Note it is normal to hear refrigerant flowing as the compressor stops and starts.

CHANGING THE LIGHT BULB

Note: all parts removed should be kept safely. You will require these for the reinstallation of the door.

Before removing the light bulb, YOU MUST UNPLUG THE UNIT. FAILURE TO DO SO MAY RESULT IN ELECTRICAL SHOCK OR PERSONAL INJURY.

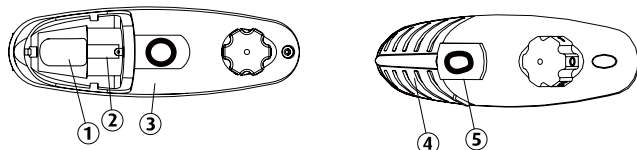

- Remove the light bulb cover (4) by gently pulling the bottom edge of the light bulb cover.
- Unscrew the bulb (1) Fit a 10w refrigerator bulb that is the same shape and size. Replace the light cover.

WHEN NOT IN USE FOR LONG PERIODS

- Unplug your Husky Refrigerator.
- Clean and dry the inside of the appliance. Leave the door slightly open to allow it to dry completely.
- A chiller which is unused without being cleaned may start to smell musty or develop mildew.

DEFROSTING

The surface of the evaporator ices up when the refrigerator is working. This is an entirely normal part of operation. If the frost layer is more than 3mm/1/8" thick, the refrigerator must be defrosted and cleaned to avoid unnecessary energy consumption and inefficient operation.

- Remove all items inside and unplug the unit.
- After defrosting, clean the unit (see instructions below) and allow it to dry. Reconnect to the mains supply and follow the directions 'OPERATION' on page 5.

CLEANING

To ensure efficient operation the back and bottom of the chiller should be cleaned thoroughly. **Note:** do not use abrasive cleaners!

- Unplug your Refrigerator.
- Wipe the interior with warm water and neutral detergent.
- Dry all surfaces thoroughly.
- Use mild soapy water to clean the door seal.

MOVING YOUR REFRIGERATOR

- Unplug the appliance
- Remove all items inside

Note: never hold the appliance by the door.

paper disposal service. The wrapping foil is made of polyethylene. The polyethylene pads and stuffing contain no fluorochloric hydrocarbons. All these valuable materials may be taken to a waste collecting depot and used again after adequate recycling. Consult your local authority for the name and address of the waste paper disposal services nearest to you.

SAFETY INSTRUCTION & WARNINGS

Before switching on your Refrigerator, read the information in this User Guide carefully. The User Guide contains important observations relating to the assembly, operation and maintenance of the appliance.

Please keep this booklet in a safe place for future reference. If you ever sell this unit, hand this User Guide to the new owner.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of these instructions.


WARNING: When positioning the appliance ensure the supply cord is not trapped or damaged. Do not locate extension sockets or charging transformers/power supplies adjacent to the compressor at the back of the unit, as they could overheat.

- Do not use damaged appliances. If you are in any doubt, consult the supplier.
- Connection and installation of your Refrigerator are to be carried out in strict compliance with the relative instructions in this User Guide.
- For safety, the appliance must be properly earthed in accordance with specifications.
- Always remember to unplug the appliance before cleaning. Never unplug your refrigerator by pulling on the power cable. Always grip plug firmly and pull straight out from the socket.
- All electrical repairs must be carried out by qualified engineers. Inadequate repairs may be dangerous.
- DANGER OF FERMENTATION: Keep alcoholic beverages in airtight bottles or containers.
- Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping. If the refrigerant comes into contact with the eyes, it may cause serious eye injury.
- Do not obstruct or cover the ventilation aperture.
- Do not allow children to play with your Husky Refrigerator, or to sit on it or hang onto the door.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



SPECIFICATIONS

- This appliance is designed as a cooler for wine, soft drinks and beer.
- It is intended strictly for domestic use.
- The refrigerating circuit is leak-proof.

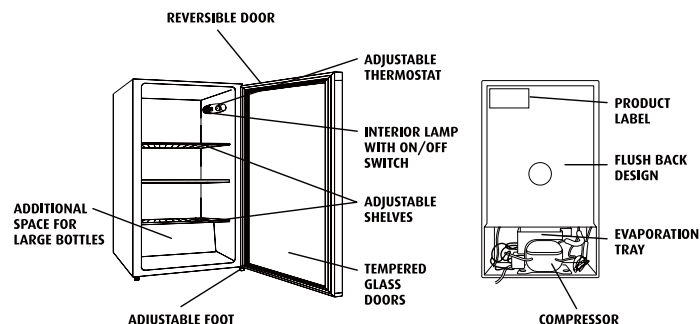

BEFORE USING FOR THE FIRST TIME

- For good circulation, the vent at the back of the unit must not be blocked. Keep 50mm of clear space between the back of the appliance and the wall, and 100mm between the sides and the wall. Your Refrigerator should be placed on flat and firm surface for quieter operation.
- If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade.
- Do not expose the appliance to direct sunlight or a heat source such as ovens, radiators, heaters, etc.
- Do not under any circumstances place heated beverages in your Refrigerator.
- Do not open the door more often than necessary to lessen the escape of cold air.
- For better air circulation, do not overfill the unit.
- Adjust the temperature regulator according to the amount of product and the ambient temperature.

OPERATION

The first time you switch the unit on, set the temperature control to the "7" position. After 20 minutes, adjust the temperature control to "3". This setting should be correct for general use. To turn the unit off, turn the temperature control to "0".

Note: turning the temperature control to "0" stops the cooling cycle but does not shut the power off from the unit. If the unit is unplugged, turned off, or in case of power failure, you must wait five minutes before restarting the unit. If you do not wait, the unit may not start.

WARNING

If temperature selector is set to too low a setting, drinks become frozen. In extreme circumstances, glass bottles may even break. Always exercise caution when setting temperature.

- Do not place heavy items (more than 20kg) on top of the chiller.
- Do not place any items on top of the chiller which may fall off when the door is opened.

